

IMPORTANT

Your new **F99EKDPS (PS)** undercounter dishwasher must be installed by professionals electrician and plumber. Please take note that the electrical is 208/240 V, single phase and requires a 40 Amp breaker. Your drain line **MUST NOT** exceed 24" in height.

INSTRUCTIONS FOR DAILY USE

- 1 Open the door of the machine and ensure the **OVERFLOW TUBE** is properly set in place (grey tube located in bottom of the machine). Once the overflow tube in place, press the main switch (Button **"A"**). This will turn power on and begin the flow of water into the wash tank. Once the Temperature light (Button **"D"**) is on, the water is heated and the machine is ready to use.
- 2 Open the door and place the dish rack inside the machine. Close the door and choose the cycle of your choice (Button **"B"**). Press the **CYCLE BUTTON** (Button **"C"**) and it will start automatically. The "cycle light" will flash during the cycle and stop once ended.
- 3 At the end of the day, you must **DRAIN** the machine. To do so, open the door and remove the **OVERFLOW TUBE**. Once removed "Press & Hold" the **DRAIN PUMP BUTTON** for around 5 seconds (Button **"F"**). ****The door must be OPEN when starting the drain**** You will see the water level decrease. Once the wash tank is empty, **TURN OFF** the machine (depress button **"A"**) and put the **OVERFLOW TUBE** back into its position. Close the door.

For any further questions or concerns, please contact:

Eurodib Toll Free: 1 888 956 6866

